

## Model 871 Scoreboard Instructions

Turn Scoreboard on with the switch on the right side of the keyboard.  
It will ask "start where left off"... enter **NO** unless there was a power outage.  
It will ask for the "code"... enter **871**  
It may ask you about "Book Mark", if it does, say **NO**  
It will ask about a "penalty time out"... enter **NO**

**\*One hand-held remote is for the Main Clock and one is for the Shot-Clock (when in use)**

### Set the Time:

Press **SET**, then **TIME**

The display will show SET MM:SS.S

Enter the time you want. (i.e. **20:00.0**), then press **YES**

The display will show PERIOD 0

Enter the period. (i.e **2**)

Use the hand-held remote to start and stop the clock. This remote will also shut off the horn when it sounds at the end of the period.

### Set the Score:

Press **HOME SCORE** or **GUEST SCORE**

The display shows: HOME + or GUEST +

Enter the score you want (i.e. **3**)

The display now shows HOME +3 or GUEST +3

The score board shows HOME 3 or GUEST 3

\*\*\*You can also add 1 to the existing score as well by pressing **HOME SCORE** and then **1**.

### Shots on Goal:

The **HOME** and **GUEST SHOTS** operate the same way as **HOME** and **GUEST SCORE**.

### Penalty Timer:

Press **SET**, then **HOME PENALTY** or **GUEST PENALTY**

Enter the time (i.e. **02:00**), then press **YES**      \*\*\* (always four digits)

The display will ask for the player number.

Enter the player number (i.e. **03**)      \*\*\* (always two digits)

### Clearing the Penalty Timer:

Press the **HOME PENALTY** or **GUEST PENALTY** key to display the penalty.

Press **PENALTY CLEAR**, and then press **YES**.

## Model 0083261 Scoreboard Instructions

Turn Scoreboard on with the switch on the right side of the keyboard.  
It will ask “start where left off”... enter **NO** unless there was a power outage.  
It will ask for the “model number”... enter **008 3261**  
It will ask about a “shot clock”... enter **Yes or NO (If Yes – enter “30” for time)**  
It will ask about a “penalty time out”... enter **NO**

**\*One hand-held remote is for the Main Clock and one is for the Shot-Clock (when in use)**

### Set the Time:

Press **SET**, then **TIME**  
Enter the time you want. (i.e. **20:00** or **5:43**), then press **YES**

\*\*\* 4 digits are not required on this clock, but the **colon separating minutes and seconds** is.

The display will show **PERIOD**  
Enter the period. (i.e **2**)

Use the hand-held remote to start and stop the clock. This remote will also shut off the horn when it sounds at the end of the period.

### Set the Score:

Press **HOME SCORE** or **GUEST SCORE**  
The display shows: HOME + or GUEST +  
Enter the score you want (i.e. **1**)  
The display now shows HOME +1 or GUEST +1  
The score board shows HOME 1 or GUEST 1

\*\*\* You can also add 1 to the existing score as well by pressing **HOME SCORE** and then **1**.

### Shots on Goal:

The **HOME** and **GUEST SHOTS** operate the same way as **HOME** and **GUEST SCORE**.

### Penalty Timer:

Press **SET**, then **HOME PENALTY** or **GUEST PENALTY**  
Enter the time (i.e. **2:00** or **10:00**), then press **YES** (\*\*remember the **colon**)  
The display will ask for the player number.  
Enter the player number (i.e. **03**) (\*\*(always two digits)

### Clearing the Penalty Timer:

Press the **HOME PENALTY** or **GUEST PENALTY** key to display the penalty.  
Press **PENALTY CLEAR**, and then press **YES**.