Long Branch Arena

Switch to scoreboard: GAMETIME GAMETIME Switch to clock: TIME ENTER Set period time: TIME xxxx ENTER Set period: Press PERIOD until correct is displayed (1-5) Start or Stop time: STOP/GO Increase score: VS or HS will increase score by 1 Set score (setting score to 00 will clear): VS or HS xx ENTER Set penalty (set penalty to 000 to clear): VP or HP x (slot) TIME xxx (time) ENTER ENTER To keep the default penalty of 2 min press ENTER while it is still flashing.

ETOSICOKE

To make penalty changes, select the slot displayed on the board.

(Note - on occasion clearly a penalty will change the visitor score and may clear all the penalties.

In this case, manually correct the visitor score and put back in any other penalty times.) **Horn: HORN ENTER**

Interval Horn (NHL/U8): TIME HORN xxxx (interval) ENTER (setting to 0000 will cancel) Revision: 2024