

OPERATOR'S INSTRUCTIONS - ARMSTRONG RINK

HORN	MISC SHOT TIME	MISC MODES	SET	7	8	9	YES
TIME OUT TIMER	PNLTY ON OFF	PNLTY INSERT	TIME	4	5	6	NO
HOME GOAL	HOME SHOTS	PNLTY CLEAR	HOME PNLTY	3	2	1	HOME SCORE
GUEST GOAL	GUEST SHOTS	PNLTY EDIT	GUEST PNLTY	:	BLANK	0	GUEST SCORE

REMOTE CONTROLS, connect timer control to right side and shot clock remote to left side of main unit.
NOTE, to run shot clock you must use a remote attachment with single spring toggle
NOTE, TO RETURN TO TIMER PRESS "TIME"
NOTE, TO RUN CLOCK WITHOUT SHOT CLOCK RESTART POWER.

TO TURN CLOCK ON

1. ENTER MODEL NUMBER 0083261
2. SHOT CLOCK YES OR NO IF YES ENTER 30
3. PENALTY TIME OUT ENTER 00, OB ENTER "NO"

TO SET TIME CLOCK

1. PRESS "SET"
2. PRESS "TIME"
3. ENTER DESIRED TIME (02 FOR WARMUP, 15:00 FOR GAME OR 20:00 FOR JUNIOR AA **or as directed.**)
4. PRESS "YES"

TO SET PERIOD

DISPLAY NOW SHOWS PERIOD AS 0, ENTER 1 OR 2

TO SET GOALS SCORED

1. PRESS "HOME SCORE" OR "GUEST SCORE" THEN ENTER 1 AND REPEAT WITH EACH GOAL PRESSING 1 EVERY TIME A GOAL IS SCORED.
- **OR****
1. CLEAR GOAL BY PRESSING "SET" THEN "HOME SCORE" OR "GUEST SCORE" AND ENTERING THE DESIRED NUMBER.

TO SET PENALTY TIME

1. PRESS "SET"
2. THEN PRESS "HOME OR GUEST PENALTY"
3. THEN ENTER 2:00 AND PRESS "YES"
4. THEN ENTER 01 FOR THE FIRST PENALTY THEN 02 FOR THE SECOND PENALTY.
5. DO SAME FOR EACH TEAM.

TO CANCEL A PENALTY

1. PRESS HOME OR GUEST PENALTY
2. THEN PRESS PENALTY CLEAR. DISPLAY WILL PROMPT FOR YES OR NO,
3. PRESS YES AND PENALTY WILL CLEAR FROM BOARD.