OPERATOR'S INSTRUCTIONS – CUMBERLAND ARENA

HORN	MISC SHOT TIME	MISC MODES	SET	7	8	9	YES
TIME OUT TIMER	PNLTY ON OFF	PNLTY INSERT	TIME	4	5	6	NO
HOME GOAL	HOME SHOTS	PNLTY CLEAR	HOME PNLTY	3	2	1	HOME SCORE
GUEST GOAL		PNLTY EDIT	GUEST PNLTY		BLANK	0	GUEST SCORE

REMOTE CONTROLS AND SHOT CLOCK ARE NOT AVAILABLE AT THIS ARENA, PORTABLES MU BE USED AND ARRANGED FOR WELL BEFORE THE GAME IS PLAYED

TO TURN CLOCK ON

- 1. ENTER MODEL NUMBER 0083261
- 2. SHOT CLOCK ENTER NO
- 3. PENALTY TIME OUT ENTER "00", OB ENTER "NO"

TO SET TIME CLOCK

- 1. PRESS "SET"
- 2. PRESS "TIME"
- 3. ENTER DESIRED TIME (02:00 FOR WARMUP, 15:00 FOR GAME OR 20:00 FOR JUNIOR AA or as directed.
- 4. PRESS "YES"

TO SET PERIOD

DISPLAY NOW SHOWS PERIOD AS 0. ENTER 1 OR 2, THEN PRESS "TIME"

TO SET GOALS SCORED

- 1. PRESS "HOME SCORE" OR "GUEST SCORE" THEN ENTER 1 AND REPEAT WITH EACH GOAL PRESSING 1 EVERY TIME A GOAL IS SCORED.(PRESS TIME TO RETURN TO GAME TIMER)
- 1. CLEAR GOAL BY PRESSING "SET" THEN "HOME SCORE" OR "GUEST SCORE" AND ENTERING THE DESIRED NUMBER.

TO SET PENALTY TIME

- 1. PRESS "SET"
- 2. THEN PRESS "HOME OR **GUEST PENALTY"**
- 3. THEN ENTER 2:00 AND PRESS "YES"
- 4. THEN ENTER 01 FOR THE FIRST PENALTY THEN 02 FOR THE SECOND PENALTY, ETC...
- 5. DO SAME FOR EACH TEAM.

TO CANCEL A PENALTY

- 1. PRESS HOME OR **GUEST PENALTY** 2. THEN PRESS PENALTY CLEAR. DISPLAY WILL PROMPT FOR YES OR NO, 3. PRESS YES AND
- PENALTY WILL CLEAR FROM BOARD.