

Instructions for use of Clock/shotclock in Arena(Hockey/Ringette/Lacrosse)

To return to game mode press any button. Ensure remotes are plugged in and that the main clock operator has the proper one.

To Set Main Clock:

Hit Set Main Clock - Look at the Console screen - Enter Time 20:00 minutes for example and be sure to add the extra 0 i.e. Console Screen should read 20:00:0 then Enter/Yes. Don't forget that extra zero.

To Enter Penalties:

Hit Player Penalty (Home or Guest) – Enter player's number which you will see come up on Console – Hit Enter/Yes – 2:00 will automatically come up for length of penalty. If penalty is 2:00 than hit Enter/Yes and penalty will come up on score clock. If penalty is longer than 2:00 enter it when you see the 2:00 minutes come up on the screen. It will replace the 2:00 min time. Hit Enter/Yes and the new time will come up on the score clock.

To enter second penalty for either team when first penalty has not expired – Hit Player Penalty. Player penalty #2 will show on console screen. Follow same instructions as above to enter number and length of penalty.

To enter third penalty for either team when first two penalties have not expired – Hit Player Penalty. Player penalty #3 will show on console screen. Follow same instructions as above and enter player number and length of penalty. The third penalty will not show on score clock until Player Penalty #1 has expired. It will all do this automatically but watch clock to ensure it works properly as sometimes there can be a computer malfunction.

Cancelling Penalties:

Should a goal be scored which requires a penalty to be erased from the score clock. Hit Delete Penalty button. 1st penalty will come up. Hit Enter/Yes to delete. Continue this to clear one penalty at a time. To delete all penalties at once, hit Delete all Penalties button and hit Enter/Yes. All penalties will be deleted for the one team.

Time-Outs:

If a team requests a time out, hit Timeout On/Off button. 30 seconds will appear on console. Hit Enter/Yes and time out countdown will appear on score clock and start to countdown. If penalties are on score clock, they won't move while 30 sec timeout counts down.

Set Main Clock for second or third periods with penalties still on board:

If there are still penalties on the clock at the end of one period and you need to set clock for new period – Hit Set Main Clock – Enter length of period – Hit Enter/Yes. On console screen it will ask if you want to adjust penalty timers. Hit Cancel/No. Time will show on score clock and penalties will remain as the ended at the end of the previous period.

Operation of Controller switches (Ringette/Lacrosse):

Clock must be running for shot clocks to work. Do Not change codes. To adjust shot clock time - Hit menu - then right arrow - then bottom arrow and keep scrolling the down arrow until screen says *menu-main edit settings*. Press Enter/Yes. - Hit down arrow until screen says Shot clock Time reset 30 - Hit Enter/Yes - Shot clock mode Sync w/main question will come up on console. Hit Enter/Yes

The codes have been set on these consoles, and they have the defaults for the games already preset. So the code for Hockey/Ringette/Lacrosse is 4402 and the time set for the shot clock is 30.

TROUBLESHOOTING:

Shots on net not going up on the score clock. Code is improperly set. To see if Code is set for 4402 you hit menu, then right arrow until you see Code on console screen. Hit Enter/Yes then enter 4402 then hit Enter/Yes.

When you enter a player penalty and the player number comes up in the shots on goal slot then the code is improperly set. See above to reset code.

Shot clock will not work. (Main clock must be running)

1. Check to see that shot clocks are plugged in. Sometimes they get bumped and both must be plugged in to function properly
2. Check to see if remote is functioning. If shot clocks are on but won't start or reset. Make sure remote is plugged in to back of console. If still not functioning, exchange remote with main clock remote. If main clock remote starts and resets the shot clocks then wiring is shot for the original remote. Contact arena attendant for new remote. If you can't find anyone or if game is in progress, use Console to stop and start main clock and use the plug in the working remote to the back of the console to run and reset the shot clock.