

CLOCK OPERATION

STARTUP

Turn on switch (bottom right hand corner)

Clock asks for its model number Gold Rink *871*

Green Rink *0083263*

Clock asks if you want to use the shot clock *NO*

Clock asks if you want to use penalty timeout *YES*

SET UP TIME AND PERIOD

Press *SET* *TIME* *20:00* (or length of period wanted) *YES*

(Note: you must input the colon as well as the numbers to set the time)

Press *HOME SCORE* *0* and *GUEST SCORE* *0*

CHANGE THE TIME

Press the *SET* *TIME* and reset correct time as before

START THE GAME

Hand held control (pickle) starts and stops clock (at end of period horn sounds automatically and will stop when switch is turned off)

GOALS

To record a goal press *HOME SCORE* or *GUEST SCORE* *1*

(In GOLD arena, the home and visitor buttons or backwards-for a visitor goal you must press HOME SCORE and vice versa) For second goal press *HOME SCORE* or *GUEST SCORE* *1* as before. (Goals are accumulative).

To correct a score *SET* *HOME SCORE* or *GUEST SCORE* *NEW SCORE* *YES*

PENALTIES

Press *SET* *HOME PENALTY* or *GUEST PENALTY* Length of penalty *2:00* minutes *YES* then press player number (e.g. 07 or 12). (Board records more than 2 penalties and these will drop onto the display as others expire). To record a penalty during "running time" set up the penalty as before (usually 3:00 minutes) except do not input player number until the puck is dropped.

To run clock during intermissions without running penalty's press *PENALTY ON/OFF* before and after

In the GOLD arena, the Home and Guest penalty buttons are also backwards

CLEAR PENALTIES

Press *HOME PENALTY* or *GUEST PENALTY* repeatedly until you find the correct penalty on the controller window then press *PENALTY CLEAR* *YES*