



LACROSSE MESH KIT INSTRUCTIONS

1. Mesh Prepare the mesh by folding over the first row of holes so that they overlap the third row. (See illustration)

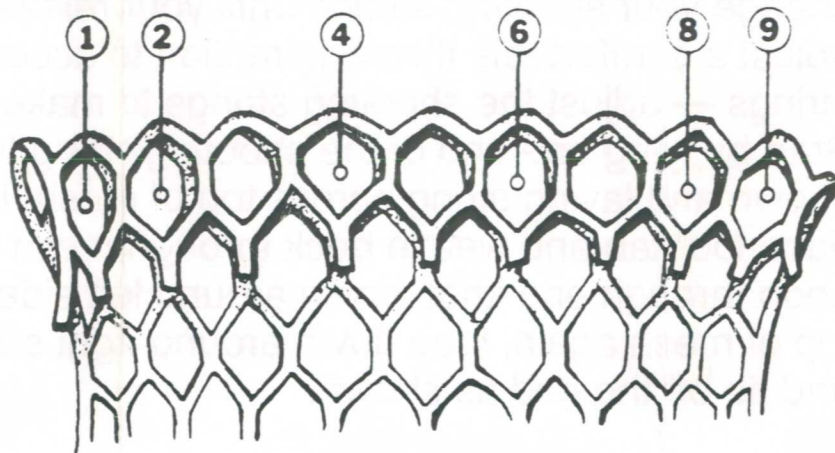

2. Long Leather Thong

Working from the back of the head lay the mesh in place with the overlap towards you. Tie the first mesh hole to hole in head with leather thong. Work across the top of the head, tying the second, fourth, sixth, eighth and ninth mesh holes to their respective holes in the head as shown. Be sure each loop is as tight as you can pull it.

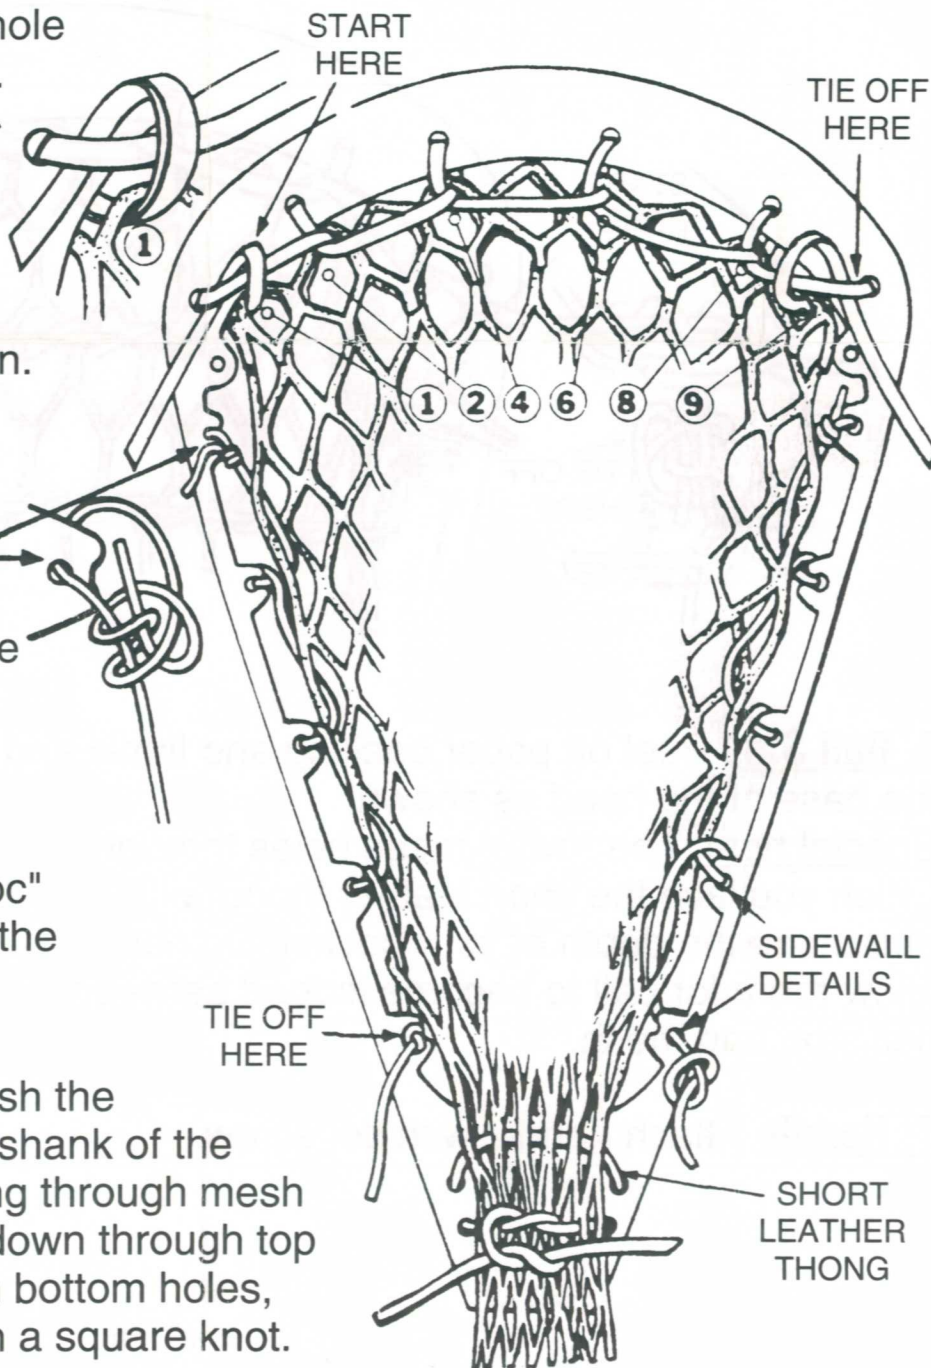

3. Sidewall Laces

Start sidewall lacing as shown by tying knot on the second "lace-loc" tab, and weave down sidewall, capturing mesh between "lace-loc" tabs. Tie off the lace on the bottom "lace-loc" tab. Repeat procedure on the other side.

START
HERE

TIE OFF
HERE

SIDEWALL
DETAILS


SHORT
LEATHER
THONG

4. Short Leather Thong

Lash the bottom of the mesh to the shank of the head by looping short thong through mesh where shown, pass ends down through top holes in shank, up through bottom holes, through mesh and tie off in a square knot.


5. Shooting Strings Shooting strings are the ingredients which determine the manner in which your pocket will release the ball. Be sure to adjust the tension so you do not create a severe whip or a soft shot. Experiment and change your shooting strings until your release is crisp and accurate. Do not adjust a comfortable throwing motion to accommodate misplaced shooting strings — adjust the shooting strings to make them feel right.

Start by tying one end of the shooting string to the top left "lace-loc" tab as shown and laying string across top of mesh. Loop down through right top "lace-loc" tab and weave back through mesh and around string as shown. Loop through end knot, down around left sidewall lace as shown, lay across top of mesh again, loop down around right sidewall lace, weave back across and tie off the end as shown.

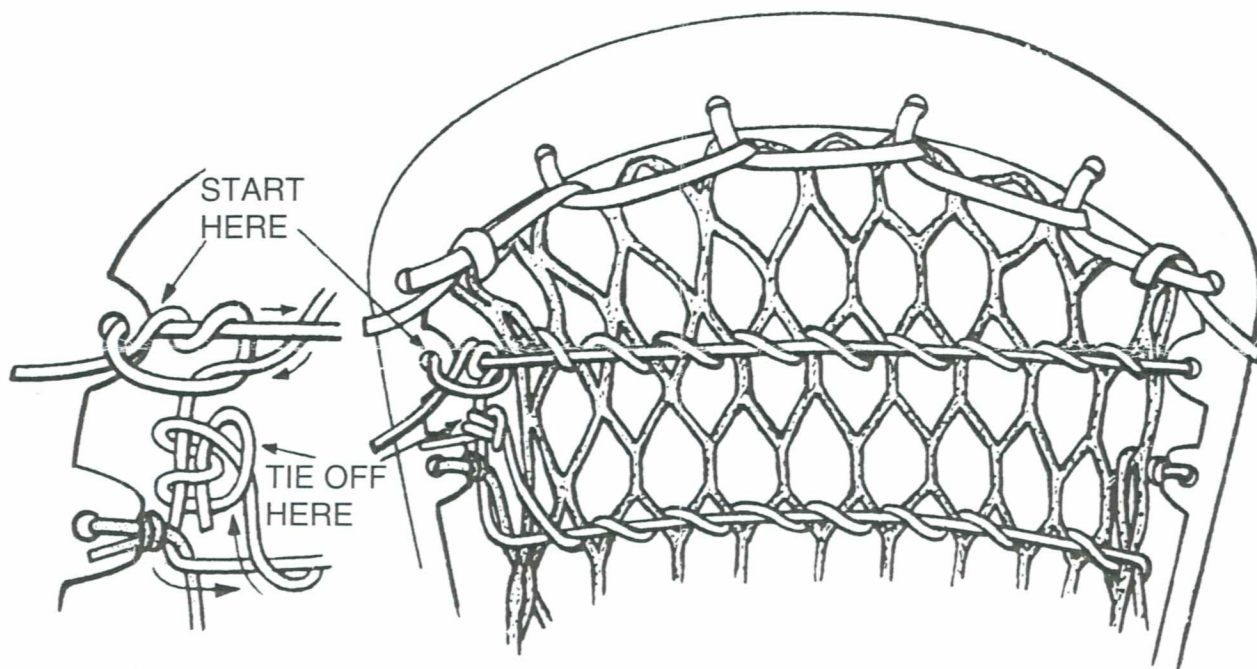

6. Ball Stop Peel off paper backing and firmly and squarely press it into the base of the head as shown.

Special note: The row of mesh holes through which you lace the short leather thong will determine the depth of your pocket. Do not allow room for ball to become lodged between ball stop and mesh.

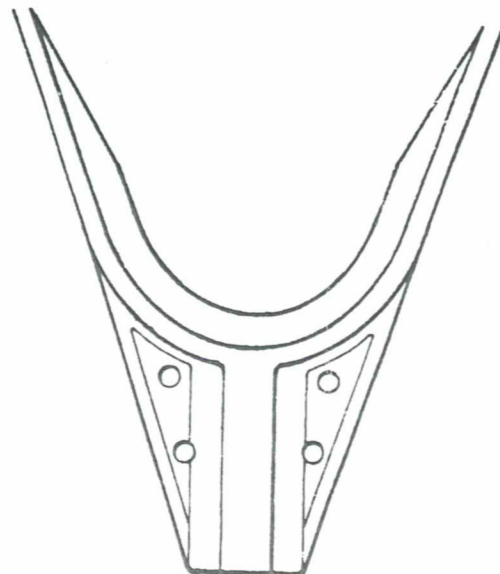

7. Handle Attach handle with set screw.